


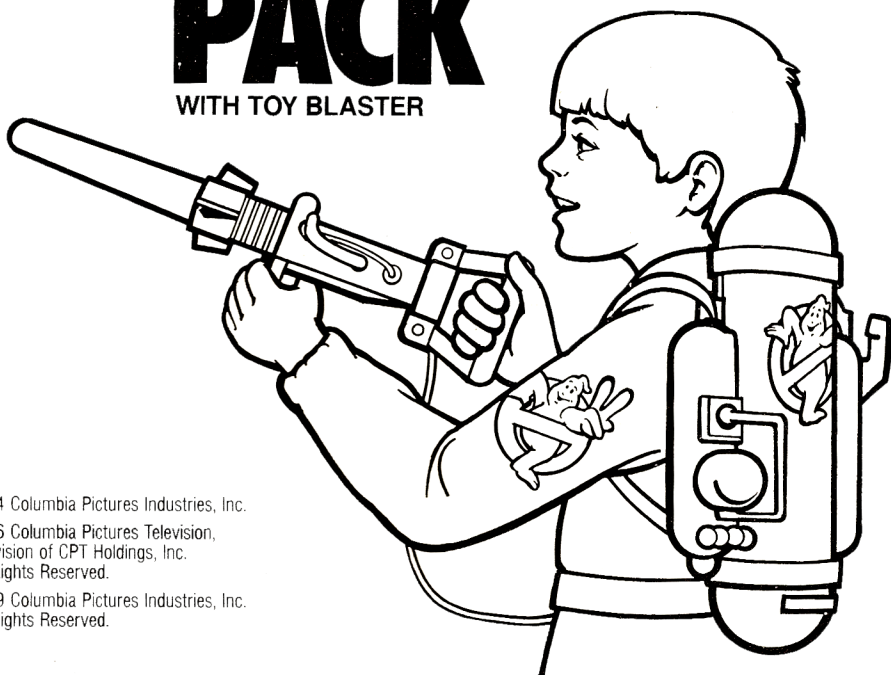

ECTO-CHARGER PACK™

WITH TOY BLASTER



© 1984 Columbia Pictures Industries, Inc.

© 1986 Columbia Pictures Television,
a division of CPT Holdings, Inc.
All Rights Reserved.

© 1989 Columbia Pictures Industries, Inc.
All Rights Reserved.

WE REALLY DO CARE!

We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:



KENNER PRODUCTS
Consumer Affairs Dept.
1014 Vine St.
Cincinnati, OH 45202

Kenner®

• Kenner, a division of Tonka Corporation

LABEL PLACEMENT

1. Apply labels by following numbers on label sheet and using this illustration as a guide.

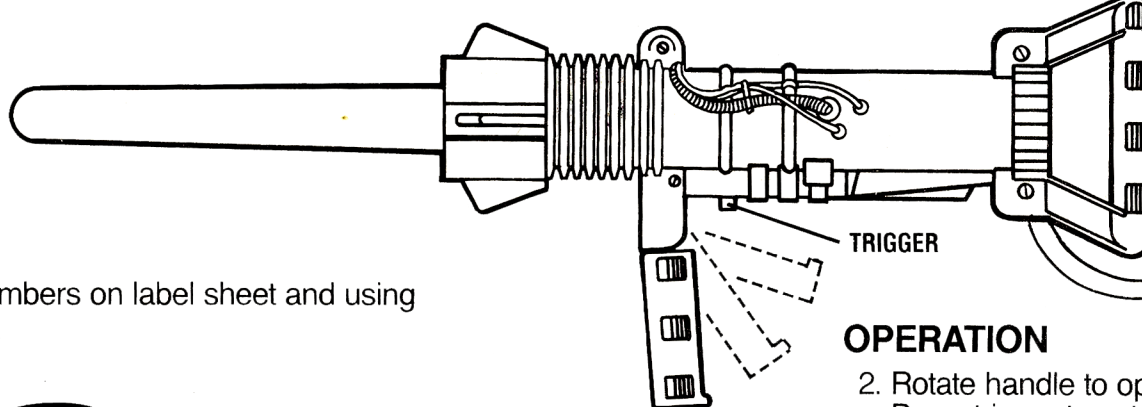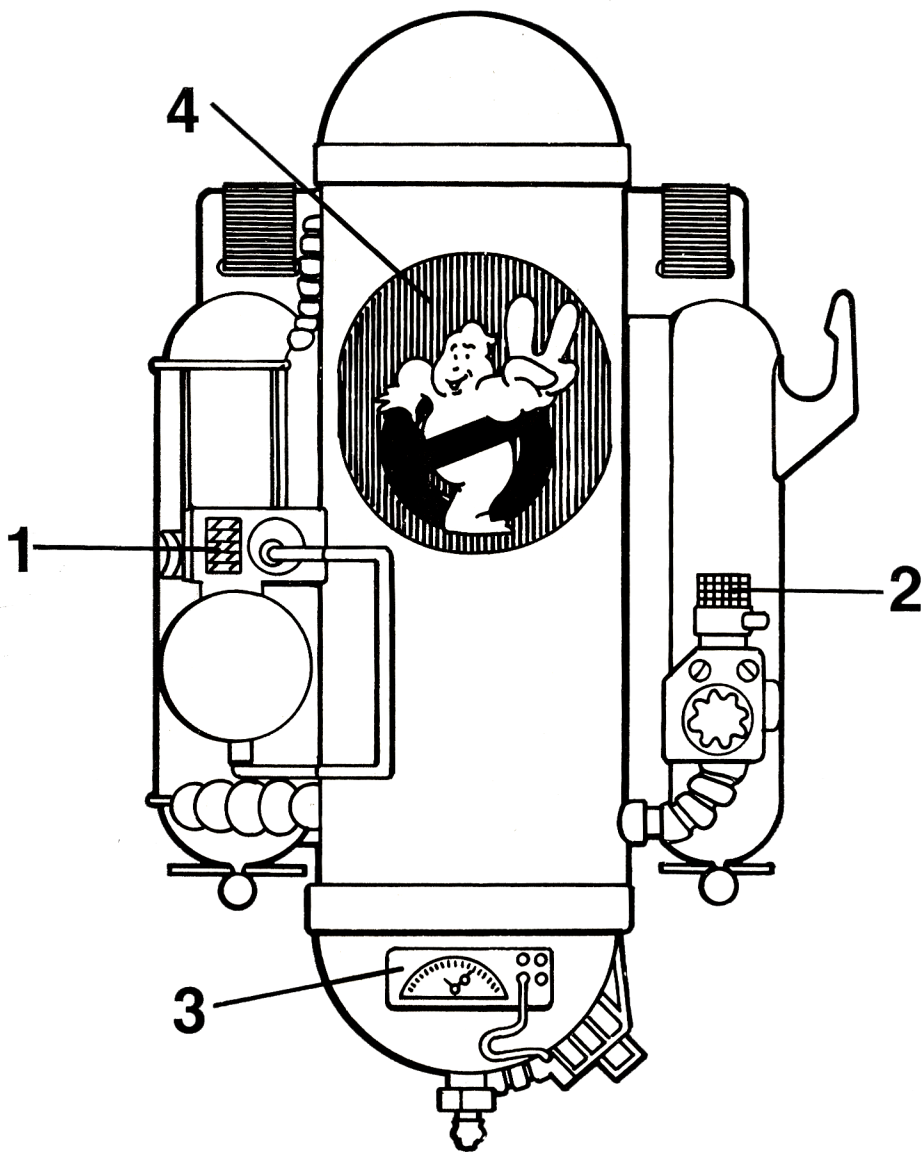


OPERATION


2. Rotate handle to open position.
Press trigger to extend blaster.

3. Insert blaster hose onto peg on bottom of backpack.


4. Blaster can be stored on backpack by placing blaster onto hook on backpack.

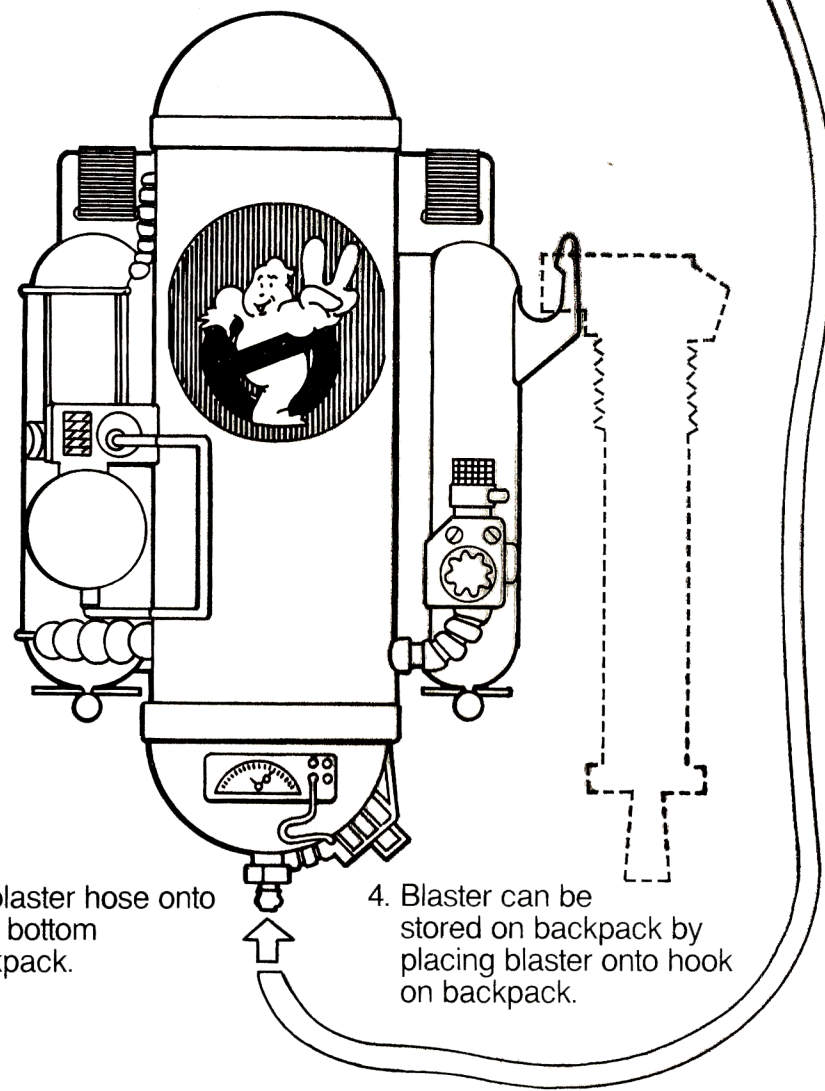

TO TIGHTEN


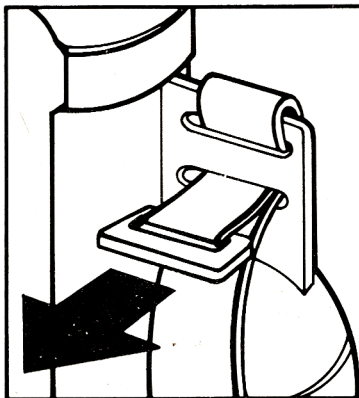


TO LOOSEN

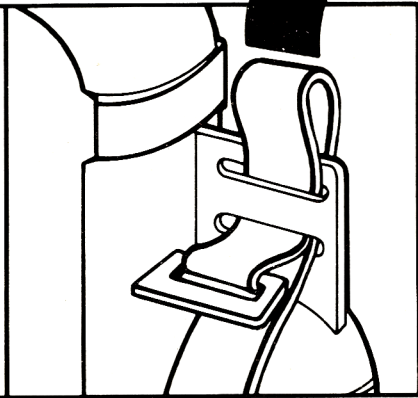

STRAP ADJUSTMENT

5. To tighten straps, pull out on tabs located at top of backpack to desired position.
6. To loosen straps, pull straps up from slot at top of backpack while pulling straps out to desired position.
7. Attach bottom portion of straps to backpack by first inserting round knobs through holes in "breakaway" catches—then slide knob into slot.

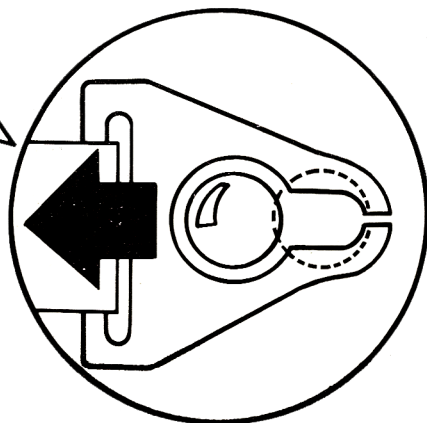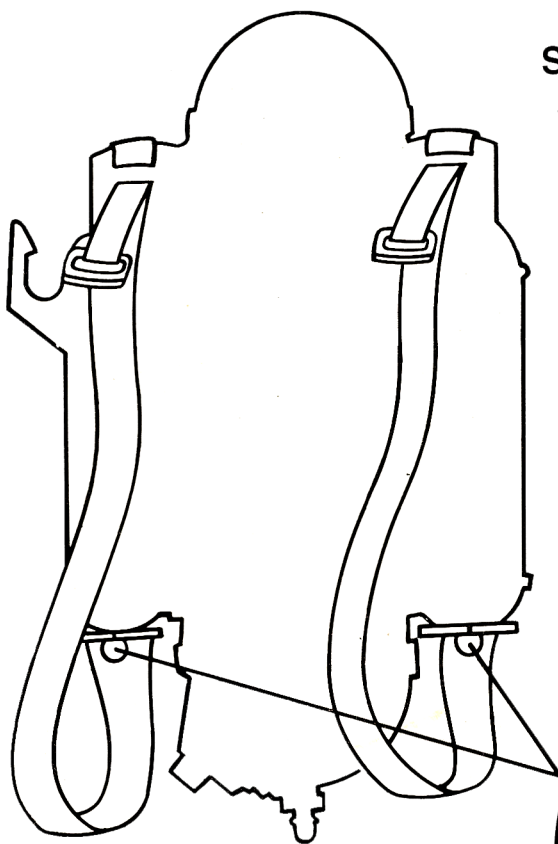

2

4

1

3

TM

© 1989 Columbia Pictures
Industries, Inc.
All Rights Reserved
Part # 4669012